

### Before you begin

Read all instructions before set up.

- Select a level campsite clear of rocks, branches, and other hard or sharp objects, to install your tent.

#### ⚠ WARNING: Keep clear of overhead power lines.

- Do not set up your tent under trees.
- For best results in windy conditions, position end of tent into the wind.
- Enlist the help of at least one other person to assist you when it is time to assemble the tent.

### Parts and Components

Description	Part Number
Main Poles, Black (2)	9230-1151
Side Poles, Gray (2)	9230-1161
Long, Side-to-Side Pole, Black (1)	9230-1171
Rainfly Pole, Black with Plastic Tips (1)	9230-1181
Rainfly	9230-1191

### To Set Up Tent

1. Unfold tent and spread out on a clean, level surface with the door facing the desired direction. Unzip door.
2. Stretch six corners of tent until floor is taut then hammer stakes through loops to secure. (Fig. 1)
3. Assemble all interlocking shock-corded, black and gray tent poles, separate by size and set aside.
4. Insert black & gray poles through sleeves in top of tent as shown. (Fig. 2)

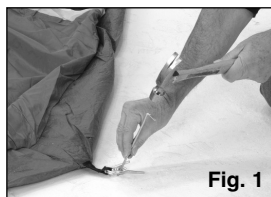


Fig. 1

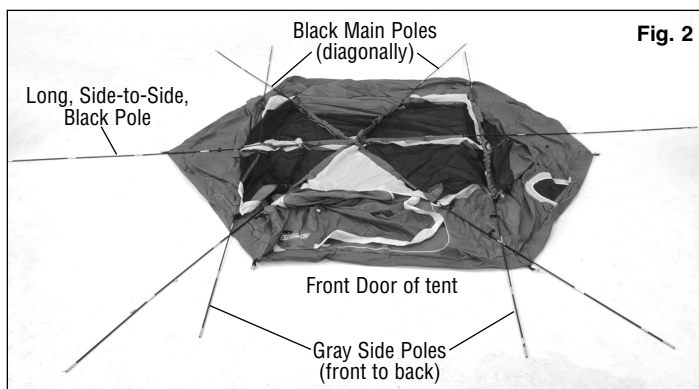


Fig. 2

5. Insert one end of each diagonal black pole into pins in rear corners of tent. (Fig. 3)
6. Go to opposite end of each pole and gradually apply pressure to the pole forming an arch. Insert the pin into the pole end at the tent corners. Repeat with remaining Gray Side Poles and long, Side-to-Side Black Pole. (Fig. 4)

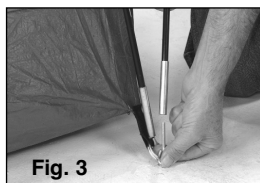


Fig. 3



Fig. 4

### To Set Up Tent (continued)

7. Attach frame clips along edges of tent to all gray and black frame poles (Fig. 5)



Fig. 5

### To Attach Rainfly

1. Open rainfly and lay out flat with seams and small pockets facing up.
2. Insert plastic tip of black rainfly pole into first pocket on rainfly. (Fig. 6)
3. Insert other plastic tipped end of rainfly pole into pocket on opposite side of rainfly.
4. Turn rainfly over and drape over tent making sure rainfly pole is centered over the door. (Fig. 7)

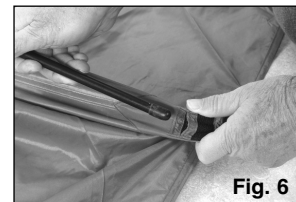


Fig. 6



Fig. 7

5. Secure rainfly to tent poles with hook & loop fasteners located on underside of rainfly. (Fig. 8)
6. Hook clips on elastic loops of rainfly onto rings on all corners of the tent. (Fig. 9 & 10)



Fig. 8



Fig. 9



Fig. 10

(continued on other side)

## To Attach Rainfly continued

7. Tie guylines onto web straps located at front and back of rainfly, stretch until taut, and secure with stakes. (Fig. 11, 12 & 13)

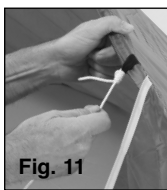


Fig. 11

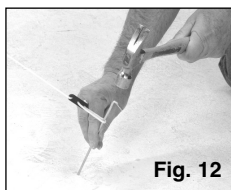


Fig. 12



Fig. 13

## Door and Window Vents

1. To use the door vent, undo zipper from inside of tent, then roll down flap and fasten with toggle and fabric loop. (Fig. 14 & 15)
2. To open rear window vent for more ventilation, unzip, then roll down and insert toggles through fabric loops. (Fig. 16)
3. Door flap can be rolled back and secured with toggle and fabric loops. (Fig. 14 & 15)

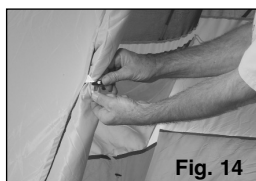


Fig. 14

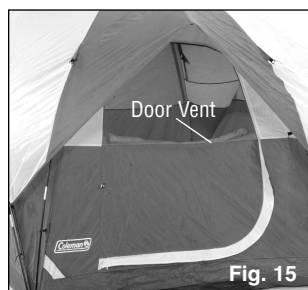


Fig. 15

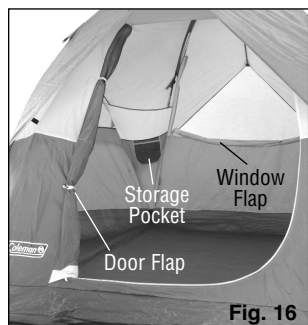


Fig. 16

## Cooler Access

The smaller zippered opening at the side of the tent is designed for added ventilation and easy access to your beverage cooler.

1. To use as a vent, unzip flap to expose screen. (Fig. 17)
2. To use as a cooler access, unzip other flap to make an avenue to bring beverages into the tent. (Fig. 18)



Fig. 17

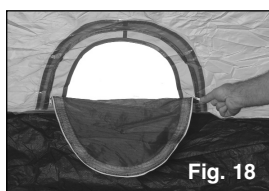


Fig. 18

## Electrical Cord Access

1. Unzip access panel in the lower right corner of tent and bring in electrical cord. Use only UL approved cords that are rated for outdoor usage. (Fig. 19)



Fig. 19

## Door Mat

1. Unfold door mat and secure with stakes. (Fig. 20)



Fig. 20

## To Store

1. All metal poles and stakes must to be placed in the storage bag to prevent damage to the fabric items placed in the carry case.
2. Make sure tent is clean and dry before placing in carry case.
3. Remove rainfly, spread out on floor of tent, then unzip door & vents before taking tent down for storage.
4. Neatly fold tent to width of pole storage bag, place on tent, roll tightly, and place in carry case.
5. Store in a clean, dry area.

## Things You Should Know:

- Under certain conditions (cold weather, high humidity, etc.) condensation will form on the inside of your tent. Condensation is caused by water vapor from your breath, perspiration, or any wet clothing inside the tent. It is NOT LEAKAGE through the tent fabric. It can be minimized by removing wet clothing from your tent and by providing good ventilation through the tent.
- Never store tent, even for a short period of time, without drying it thoroughly and brushing off caked dirt. Do not pack stakes or poles inside your tent. Use a separate storage bag.
- Stakes should be removed by pulling on the stake itself. Never pull on the tent to remove stake.
- TENT POLES SHOULD NOT BE LEFT TELESCOPED TOGETHER DURING STORAGE.
- Do not leave your tent set-up for weeks at a time. Be aware that exposure to ultraviolet rays from the sun can seriously damage material and/or cause it to become discolored.

**⚠ WARNING: Keep all flame and heat sources away from this tent fabric.**

This tent meets the flammability requirements of CPAI-84. The fabric may burn if left in continuous contact with any flame source. The application of any foreign substance to the tent fabric may render the flame-resistant properties ineffective.



The Coleman Company, Inc. • 3600 N. Hydraulic • Wichita, Kansas 67219  
1-800-835-3278 • www.coleman.com

MADE IN CHINA • PRINTED IN CHINA

© 2006 The Coleman Company, Inc.

Coleman® and Coleman® are registered trademarks of The Coleman Company, Inc.